 


DIGITAL PIANO

INSTRUCTION

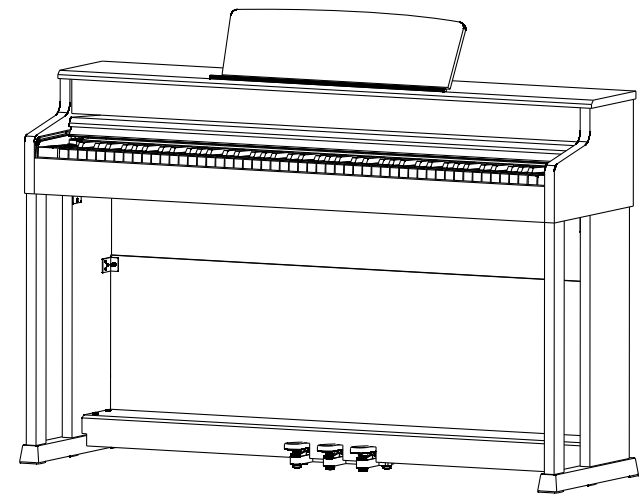

Before using this instrument, be sure
to read the "Precautions" on page 17.

FUNCTIONS

◆Before using this instrument, you must read the instruction in detail.

Special reminder: This product is an electronic product. After electrified, the loudspeaker (two horns or one horn, earphone) has some current sound as a normal phenomenon. It is necessary to keep away from these devices, such as radio, routers, TV receivers, refrigerators, washing machines, etc.

Its core using the French top DREAM sound source digitized sampling, brings realistic hearing experience for your performance.

88 progressive lever hammer keyboard, Give you the real touch of playing on a grand piano.

External headphone socket. It is easy to play without affecting others.

 
Maintenance Records

[illegible]

PRECAUTION

Power Supply

This product can be supplied by standard indoor wall socket, please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply, if you do not use it for a long time, please pull out the power cord and keep it properly.



Sign

In order to ensure that you are safe and correct use of this product, to prevent damage to the user and other people, and to the financial damage, the specification and the product marked with a series of safety signs. All kinds of signs and their meaning.

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a potential risk of death or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example



This triangle mark indicates that the user should pay attention to the matters. (left case is be careful electric shock)



The circular sign painting a slash said prohibited matters. The icon in the logo or next to the specific content of the ban. (left case is no disassemble)



Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (left case is the power plug must be pulled out of the socket)

Warning

Smoke, odor, overheating
When the product is smoking, emitting odors or overheating, it continues to be used to cause fire and electric shock. In the event of such a situation, the following operations shall be carried out immediately.

1. turn off the power supply.
2. pull the plug from the power outlet.
3. contact your agency.

Power cord

Improper use of power supply leads to danger of fire and electric shock. Must observe the following precautions.

- Special power lines specified for this product must be used.
- An AC power source with output voltage within the household rated voltage must be used.
- It is not allowed to overload the power socket and the power extension line.

Improper handling of power lines, resulting in damage or rupture of the fire and the risk of electric shock. Must observe the following precautions.

- Do not place heavy objects on the power line or make them heated.
- Do not attempt to transform the power cord or bend it too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace the power cord of the same type.

Do not use wet hands to touch the power cord and plug, otherwise there is a risk of electric shock.

Please use the power cord in the place where the water will not be spilled. Water has the risk of fire and electric shock.

Never put a vase or any other container with water in this product. Water has the risk of fire and electric shock.

Do not let the minor contact plug and power line or a connecting plate. Minor knowledge or useless electricity safety causes danger of electric shock.

Attention

Improper use of power supply leads to danger of fire and electric shock. The following matters of attention must be observed.

- Do not place the power cord near the furnace or other heat sources.
- Unplug the power cord from the power outlet. Must grasp the plug body.
- Plug the power cord into the power socket.

Before connecting or cutting off the power cord, make sure that the power is off.

The power cord should be removed from the electrical outlet of the wall before a thunderstorm occurs or traveling or before other long leave.

At least once a year, unplug the power cord from the wall outlet and clean the dust around the plug.

Don't burn this product
Do not put this product into the fire, otherwise it will cause the burning of wood products and the explosion of the internal electronic components. There is a danger of fire and personnel injury.

Water and foreign matter
Water and other liquids and (metal) into this product has the risk of causing fire and electric shock. The following operation should be performed immediately when the above situation occurs.

1. turn off the power supply
2. If the power cord is used for power supply, it will be pulled off from the wall of the power outlet.
3. contact your dealer.

Disassembling and rebuilding
Do not disassemble this product or transform it in any way. Otherwise it will be hazardous to electrical shock, burns or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your dealer.

Drop or impact

This product is subject to the risk of fire and electric shock after falling or being subjected to a strong impact. The operation should be performed immediately following the above mentioned situation.

1. turn off the power supply
2. If the power cord is used for power supply, it will be pulled off from the wall of the power outlet.
3. contact your dealer.

Plastic bag
Do not let any person put the plastic bag on the head or put in the mouth. Otherwise there is the risk of suffocation. The children's families should pay special attention to.

Keep the distance with the product and support.
Climb the body or its support is in danger of tipping or damage. The children's families should pay special attention to.

Display

You should avoid placing this product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall and cause the risk of injury.

Product movement
Before moving this product, you must first pull off the wall of the power outlet, the power cord plug and pull off all other cables and connecting wires. Otherwise there will be damage to the line, resulting in fire and electric shock hazard.

Clean

Before you clean this product, you must first remove the power cord from the wall outlet, otherwise there is a risk of fire and electric shock.

Interface

On the interface of this product can only be connected to the specified equipment and devices. The connection of non designated equipment or devices have the risk of fire and electric shock.

Location selection

Should avoid placing this product in the following places. Otherwise there will be a risk of fire and electric shock.

- The place with high temperature or dust.
- The kitchen or other places with oil fumes.
- A place where direct sunlight is irradiated. Or any other place where the product will produce high temperatures.

Volume

Do not play music for long periods of time. Special attention should be paid to the use of headphones. The volume is too high will damage your hearing.


Heavy objects
Do not place heavy objects on the product. Otherwise, the top of the product will be overloaded, causing the product to fall over or cause the object to fall.

The correct assembly of the support

Support incorrect assembly will make it overturned, causing the product drop. There is a risk of injury to personnel. Therefore it is necessary to carry out the instructions in accordance with the instructions provided to ensure that the product is proper.

PICTURE OF BODY SOCKET

 1. Piano Connection Interface Panel

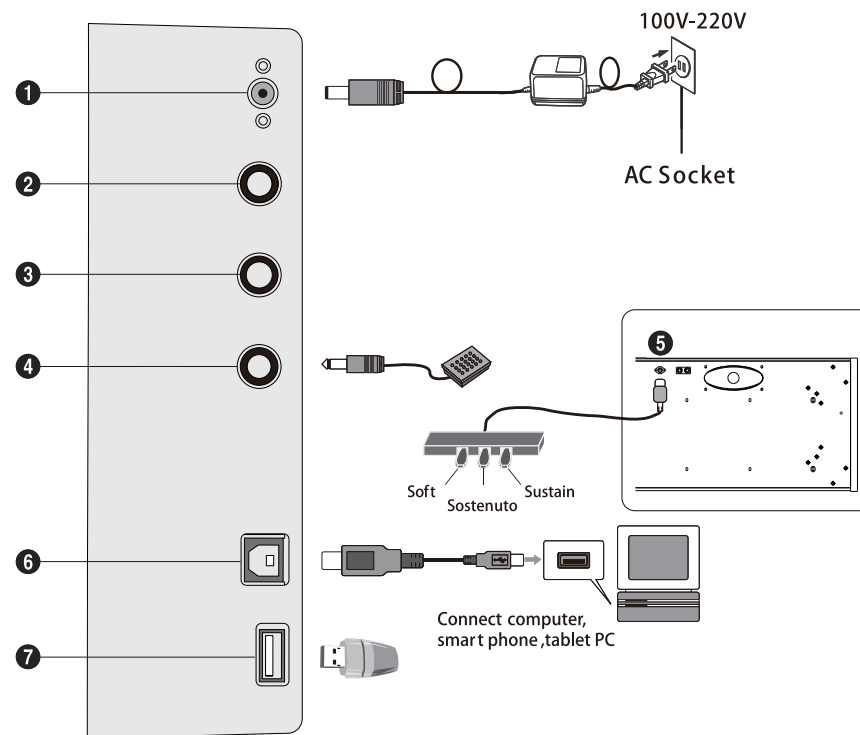

- ① Power Line Socket
- ② Audio Output
- ③ Audio Input
- ④ Sustain Pedal Socket

- ⑤ Pedals Socket
- ⑥ USB Transmission Socket
- ⑦ MP3 Socket

OPERATIONS

1.Power Line Socket

- 1.As figure shows, connect the power line when using. One end is inserted into the power outlet on the controller plate at the bottom of piano.The other end is inserted into a 100V-220V household socket.
2. Please unplug the power line and reserve it in an appropriate way when it is not used for a long time.

2. Audio Output

It supports external large speaker equipment by audio output plug.

3. Audio Input

 
External sound source can be connected to electric piano to play by audio input plug.

4. Sustain Pedal Socket

The product has tenuto pedal function. Please use pedal according to your needs when playing.

5. Pedals Socket

Insert the pedal plug into the round jack at the back of the piano and put through the triple pedals function with speaker effect.
The order is as follows: Soft, Sostenuto, Sustain;
Single pedal is optional. (Third Point)

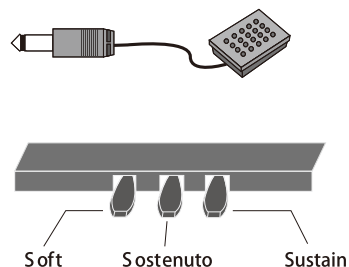

6. USB Transmission Socket

The product can be connected with computer by USB transfer interface. You can learn or play the keyboard to play, compose, store and operate other functions by the pre-installed music software on the computer. Edited music or accompaniments built in the music software can be played by the digital piano which is connected to the software or performed along with accompaniments.

7. MP3 Socket

Insert the flashdisk with MP3 format songs into "USB plug" and play MP3 songs in 3 seconds or so.

⚠ The peak value of sound needs the control of main volume lever.

Attention!

- Only support songs with MP3 format.

8. Double-Earphone Socket

The connection of headphones will cut off the output of the piano built-in speaker for not disturbing others when performing.

This product is designed with 2 earphone sockets which you can insert double earphones.

Product Care

Conscientiously do a good job in the maintenance and protection of this product. It plays an important role in prolonging the service life and reducing faults.

1.Avoid heat, dampness, or direct sunlight.

The product should not be exposed excessively to the direct sunlight, placed near the air conditioner or extremely hot places.

2.No use near Tv or radio.

This product may cause video or audio interference to the reception of TV and radio. If this happens, it should be removed from the radio or TV products.

3.Don't use paint, diluent or similar chemicals to clean it.

Wet a soft towel with weak solution and detergent and wring it out until it dries. Clean the product with this towel.

4.No shaking and collision.

The product should be moved carefully. Violent shake and collision are prohibited to avoid damaging the shell or internal electronic components.


Accessories List

Name	Number
Adapter	1 PCS
Main body of Qin	1 PCS
Foot pedal beam	1 PCS
Left/Right Support Plate	2 PCS
Left/Right Support Column	2 PCS
Back fixing plate	1 PCS
Cork	4 PCS
Screw	14 PCS
Instructions	1 copies


Specifications

Key: 88	Instructions: ≤ 3 cents
Vocal range: A ₂ ~ c ⁵	Instructions: ≥ 25W x 2
Style: Upright piano	Instructions: DC 12V 3A

 Multi-Finger Chord

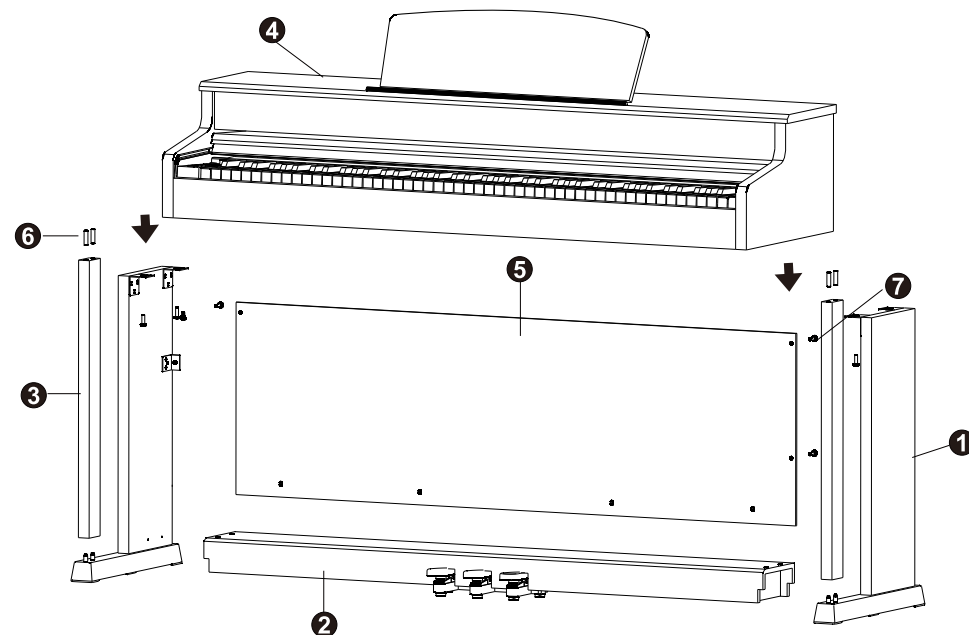

 - ❶ Left/Right Support Plate
- ❷ Pedal beam
- ❸ Left/Right Support Column
- ❹ Body
- ❺ Back fixing plate
- ❻ Log bolt
- ❼ Screw

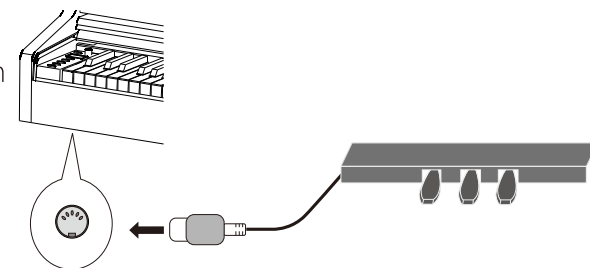

1.Voice

This product has 238 kinds of timbre, which can be freely chosen by users;

▲Simple choice of timbre:

By default, the tone selection state is used when the device is powered on. You can directly press and hold "Function".Key + keyboard "E2 or F2" combination to achieve "- or +" switch,Achieve the function of different timbre.

 


▲Quick choice of timbre:

1. Switch to the piano timbre function by pressing the "GRAND PIANO" key on the function panel;
2. By long pressing the "Function" key + keyboard "F1-D2" key combination, it is achieved.Quick selection of timbre between "000-237";

Take notice of:

The combination of digital keys needs to meet the three-digit requirements, for example, if you want to choose the number 23 tone,You need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.



2.Rhythm selection and playback

 
This product has 200 rhythms and can be freely chosen by users;

▲Rhythm selection:

1. Switch to by long pressing the "Function" key + keyboard "C1" key combination toRhythm function;
2. By long pressing the "Function" key + keyboard "E2 or F2" combination,Realize the function of switching the rhythm up and down;
3. By long pressing the "function" key + keyboard "F1-D2" key combination, it can be achievedFast choice of rhythm between "000-199";

4. Realize the rhythm by long pressing the "function" key + keyboard "D3" key combination.Play and stop.
Note:

The combination of numeric keys needs to meet the three-digit requirements. For example, if you want to choose the 23rd rhythm,



3. Selection of demonstration song

This product has 100 demonstration songs, which can be freely selected by users;

▲Selection of demonstration songs:

1. Switch to by long pressing the "Function" key + keyboard "E1" key combination toDemonstration song function;
2. By long pressing the "Function" key + keyboard "E2 or F2" combination,Realize the function of switching up and down the demonstration song;
3. By long pressing the "function" key + keyboard "F1-D2" key combination, it can be achievedQuick selection of demonstration songs between "000-099";

Note:

The combination of numeric keys needs to meet the three-digit requirements. For example, if you want to choose the No. 23 demonstrationQu, you need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

 
4.Intro/end

▲Prelude means to press this button before the rhythm starts, and then start it.Accompaniment, a short prelude will be interrupted first. After the current play is played, the main play will be automatically;;
▲The ending refers to pressing this button when you are ready to finish during the rhythm playback.A short attenuation ending will be played automatically, making it more natural at the end of the accompaniment.


1. Prelude: By long pressing the "function" key + keyboard "#D3" key + keyboard "D3" key to start the rhythm;

Note:

The combination of numeric keys needs to meet the three-digit requirements. For example, if you want to choose the 23rd rhythm,You need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

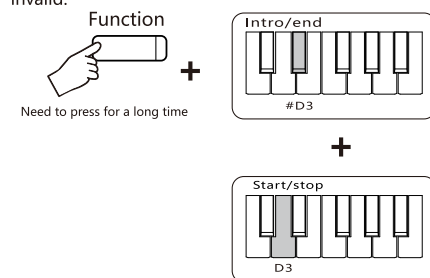

■ Smart Chord

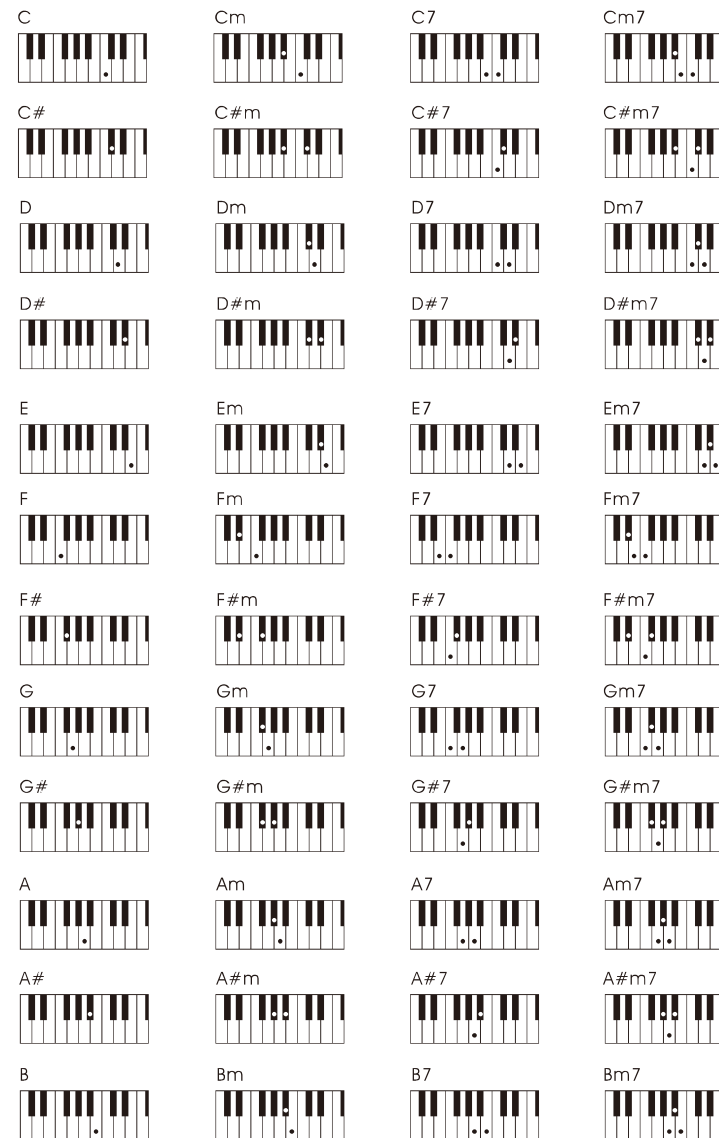 


Demo List

DEMO00	FUNK	DEMO50	TWINKLE TWINKLE VARIATION
DEMO01	RIVER_OF_DREAM	DEMO51	ATLANTIS
DEMO02	DANCING QUEEN	DEMO52	FLING TRAPEZE
DEMO03	DONNA_LEE	DEMO53	TROIS ECOSSAISES Op.72, No.3,5
DEMO04	FORGET	DEMO54	ALLEGRO CON BRIO
DEMO05	CHOPIN:GRANDE VALSE BRILLANTE	DEMO55	LEMON TREE
DEMO06	ACROSS THE SEA	DEMO56	ARABESQUE
DEMO07	XAWER SCHARW ENKA.POLISH DANCE Op.3 No.1	DEMO57	CHILDHOOD
DEMO08	RED CHERRY AND WHITE APPLE BLOSSOM	DEMO58	JUST THE TWO OF us
DEMO09	COUNTRY_GARDEN	DEMO59	SEE SHORE
DEMO10	COURANTE	DEMO60	ALL KIND OF MY EVERY THING
DEMO11	JUST DRUNK	DEMO61	NOCTURNE Op.9 No.2
DEMO12	CARRY ME BACK TO OLDVIGINNY	DEMO62	SOMETHING IN THE AIR
DEMO13	EARLY_AUTUMN	DEMO63	COMFORT
DEMO14	TWIST VARIATION	DEMO64	LET IT SNOW
DEMO15	DANSE NEGRE Op.58	DEMO65	BINGO
DEMO16	PALMLEAF	DEMO66	LIEBESTRAUM
DEMO17	D MAJOR TANGO	DEMO67	PERFECT HAPPINESS
DEMO18	SYMPHONY NO.94 SURPRISE	DEMO68	TOCCATA
DEMO19	KATYUSHA	DEMO69	LA BAMBA
DEMO20	DESAFINADO	DEMO70	RANDO CAPRICCIO
DEMO21	BEETHOVEN_BAGATELLES	DEMO71	SCHERZO
DEMO22	IN THE HALL OF THE MOUNTAIN KING	DEMO72	LA CAMPANELLA
DEMO23	EXPLORING	DEMO73	LOCK OUT
DEMO24	PERELUDE III	DEMO74	ROMANCE DE AMOR
DEMO25	GRAND MARCH	DEMO75	BARCAROLE
DEMO26	PARAPHRASE	DEMO76	CHOPIN:ETUDE IN CMINOR Op.10 No.1,2
DEMO27	DANGEROUS AREA	DEMO77	DANCE OF YOUTH
DEMO28	FUTURE	DEMO78	GRIEG_AIR
DEMO29	SUNSHINE BEACH	DEMO79	THE HOME COMING
DEMO30	JUNE SAMBA	DEMO80	LAZY_BIRD
DEMO31	KENNYG:SONG BIRD	DEMO81	RED RIVER VALLEY
DEMO32	L'INVERNO IN F MINOR	DEMO82	ENTERTAINMENT
DEMO33	WINE	DEMO83	CHOPIN:MAZURKA Op.39 No.10
DEMO34	BLUES	DEMO84	THE BEAR IN THE FOREST
DEMO35	FEELING	DEMO85	PRIMITIVE DANCE STEPS
DEMO36	TURKEY	DEMO86	MODERN GRAY
DEMO37	ETUDE IN F SHARP MAJOR	DEMO87	MOONLIGHT
DEMO38	FUNNY GENTLEMAN	DEMO88	LOVE FOR EVER
DEMO39	I DO IT FOR YOU	DEMO89	JARDIN SECRET
DEMO40	BEETHOVEN PIANO SONTA No.30	DEMO90	BALL
DEMO41	CARMEN	DEMO91	COUNTRY
DEMO42	AMERICAN PATROL	DEMO92	SOMALI LAND
DEMO43	MENDELSSOHN:RONDO IN D MAJOR	DEMO93	MAPLE LEAF RAG
DEMO44	AURORA OF CITY	DEMO94	BRAHMS,_CONCERTO
DEMO45	WISH U CHRISTMAS	DEMO95	WALTZ IN D FLAT, OP.64 NO.1
DEMO46	NO STOPPING GALOP	DEMO96	COBWEB
DEMO47	LAST SUMMER	DEMO97	HAPPY BOSSA
DEMO48	JAZZ	DEMO98	SILENT NIGHT
DEMO49	RHYTHM OF THE RAIN	DEMO99	CURIOUS STORY


Operation Guide

 2. Ending: In rhythm playback, by long pressing the "Function" key + keyboard "D3" key combination, the rhythm will end very naturally;




5.Chord

 This product has a comprehensive chord function, and single-finger and multi-finger can be used freely by users. Select (number of keys: 36); When the rhythm has been started, press and hold the "Function" key + keyboard "C3" key combination to turn on the chord function;

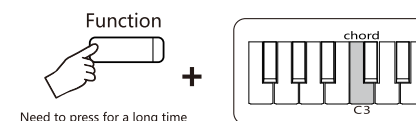


6.Sync

 1. Select the accompaniment that needs to be synchronized by long pressing the "Function" key + keyboard "C3" key combination to achieve fast one-click playback preset rhythm;
2. If necessary, you can press the synchronous key combination in the chord state to enter the standby state synchronously, play the chords, and the accompaniment will play automatically;
3. Cancel the synchronization and press the "Start/Stop" key combination.




7.StyleVolume

 1. Select the accompaniment you need by long pressing the "Function" key + keyboard "B2" key + Keyboard "E2 or F2" key combination; you can lower or increase the accompaniment volume.

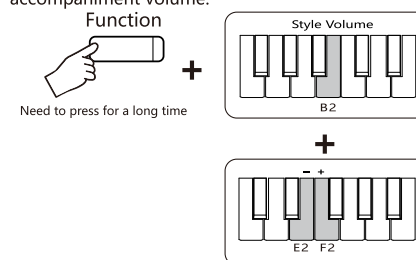


8.Style Tempo (20-280)

 Select the accompaniment you need by long pressing the "Function" key + keyboard "A2" key + Keyboard "E2 or F2" key combination; can reduce or speed up the accompaniment.

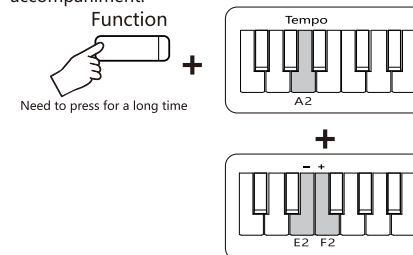


9.Metronome Tempo (20-280)

 Select the desired beat by long pressing the "Function" key + the keyboard "A2" key + Keyboard "E2 or F2" key combination; it can reduce or speed up the beat.

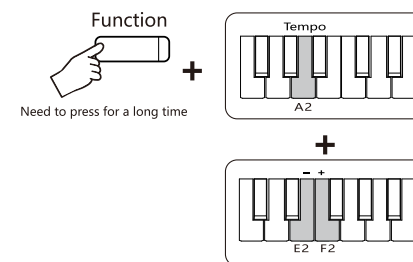

10.Demo Tempo (20-280)

 
Select the demonstration song you need by long pressing the "Function" key + the keyboard "A2" key + Keyboard "E2 or F2" key combination; can reduce or speed up the demonstration song.

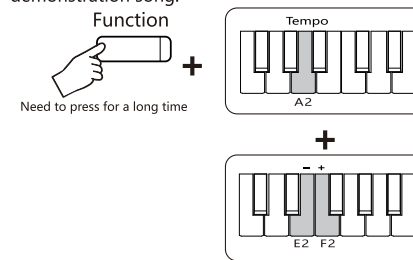

Operation Guide


11.Fill

 This product has two different styles of interludes, A and B, which can be used freely by users. Select when the rhythm has been started, press the "Function" key + The keyboard "E3 or F3" key combination can insert a small size for the current rhythm. Variations;




12.EQHigh and Low

 1. Select the tone you need, by long pressing the "Function" key + keyboard "#C1 or D1" key combination, select the corresponding function key;
2. By long pressing the "Function" key + keyboard "E2 F2" key combination, Realize the selection of EQ high and low values

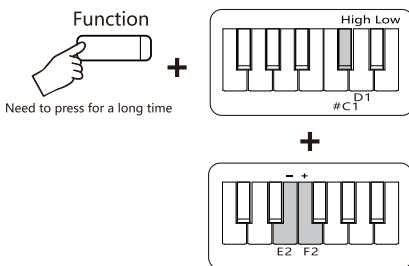

13.Dual

 1. Select the main tone you need by long pressing the "Function" key + keyboard "B3" key combination, turn on/off the dual tone function, and the default superimposed tone is string;
2. By long pressing the "Function" key + keyboard "F1 -D2" key combination, it is achieved. Quick choice between "000-237";

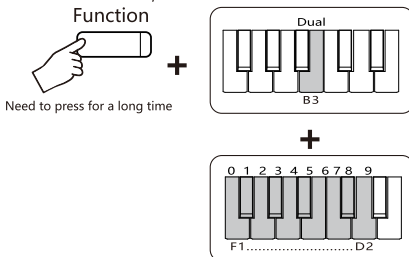


14.Split

1. Select the main tone you need by long pressing the "Function" key + keyboard "C4" key combination, turn on the keyboard segmentation function, and the default left keyboard tone is string music.
2. By long pressing the "Function" key + keyboard "F1-D2" key combination, it is achieved. Quick choice between "000-237";


Note:

 The combination of digital keys needs to meet the three-digit requirements, for example, if you want to choose the number 23 tone, You need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

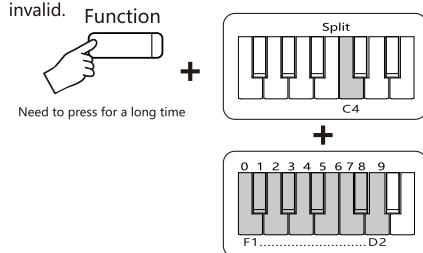


15.Metronome

 1. Turn on/off the meme function by short pressing the "me" button of the function panel;
2. Switch by long pressing the "Function" key + keyboard "#F4-#A4" key combination 5 types of beats;
3. Select the desired beat by long pressing the "Function" key + the keyboard "A2" key + Keyboard "E2 or F2" key combination; it can reduce or speed up the beat.



16.Touch Curve

 1. Turn off the force by long pressing the "Function" key + keyboard "C5" key combination. Function; or by long pressing the "Function" key + keyboard "#C5-#D5" key combination, Switch between the other three force types, which are "light, medium and heavy";
2. Factory default strength: medium.



Rhythm List

RTHM000	6/8 BLUES	RTHM050	FOX TROT 5	RTHM100	MAMBO 3	RTHM150	VINTAGE 2
RTHM001	4/4 BLUES	RTHM051	FOX TROT 6	RTHM101	REGGAE 1	RTHM151	FOLK POP
RTHM002	5/4 BEAT 1	RTHM052	FOX TROT 7	RTHM102	REGGAE 2	RTHM152	NEWAGE
RTHM003	5/4 BEAT 2	RTHM053	FOX TROT 8	RTHM103	SALSA 1	RTHM153	POP BOSSA1
RTHM004	BOOGIE WOOGIE	RTHM054	FOX TROT 9	RTHM104	SALSA 2	RTHM154	POPBOSA2
RTHM005	SOULSHUFFLE	RTHM055	COUNTRY 1	RTHM105	MODERN 1	RTHM155	POP RAP
RTHM006	RAGTIME 1	RTHM056	COUNTRY2	RTHM106	MODERN 2	RTHM156	POP SAMBA
RTHM007	RAGTIME 2	RTHM057	COUNTRY3	RTHM107	DANCE 1	RTHM157	8 BEAT 1
RTHM008	SHUFFLE 1	RTHM058	COUNTRY4	RTHM108	DANCE 2	RTHM158	8 BEAT 2
RTHM009	SHUFFLE 2	RTHM059	COUNTRY5	RTHM109	DANCE 3	RTHM159	8 BEAT 3
RTHM010	SHUFFLE 3	RTHM060	COUNTRY6	RTHM110	DANCE 4	RTHM160	8 BEAT 4
RTHM011	SHUFFLE 4	RTHM061	COUNTRY7	RTHM111	DANCE 5	RTHM161	8 BEAT 5
RTHM012	BLUES 1	RTHM062	COUNTRY8	RTHM112	DANCE 6	RTHM162	8 BEAT 6
RTHM013	BLUES 2	RTHM063	COUNTRY9	RTHM113	DANCE 7	RTHM163	8 BEAT 7
RTHM014	BLUES 3	RTHM064	COUNTRY 10	RTHM114	70s DISCO 1	RTHM164	8 BEAT 8
RTHM015	BLUES 4	RTHM065	COUNTRY 11	RTHM115	70s DISCO2	RTHM165	8 BEAT 9
RTHM016	TWIST 1	RTHM066	COUNTRY 12	RTHM116	DISCO 1	RTHM166	8 BEAT ROCK 1
RTHM017	TWIST 2	RTHM067	COUNTRY 13	RTHM117	DISCO 2	RTHM167	8 BEAT ROCK2
RTHM018	TWIST 3	RTHM068	COUNTRY 14	RTHM118	DISCO 3	RTHM168	ROCK1
RTHM019	TWIST 4	RTHM069	COUNTRY 15	RTHM119	VAPERWAVE	RTHM169	ROCK 2
RTHM020	GOSPEL 1	RTHM070	COUNTRY 16	RTHM120	FUNK1	RTHM170	ROCK 3
RTHM021	GOSPEL 2	RTHM071	COUNTRY POP	RTHM121	FUNK2	RTHM171	ROCK 4
RTHM022	GOSPEL 3	RTHM072	COUNTRYSHUFFLE1	RTHM122	FUNK3	RTHM172	ROCK 5
RTHM023	R&B	RTHM073	COUNTRYSHUFFLE 2	RTHM123	FUNK4	RTHM173	INDIE ROCK 1
RTHM024	SWING 1	RTHM074	COUNTRY SWING	RTHM124	FUNK5	RTHM174	INDIE ROCK2
RTHM025	SWING 2	RTHM075	LATIN 1	RTHM125	FUNK6	RTHM175	60th Rock
RTHM026	BLUE BOOGIE	RTHM076	LATIN 2	RTHM126	FUNK7	RTHM176	Glam Metal 1
RTHM027	JAZZ1	RTHM077	LATIN 3	RTHM127	R&B1	RTHM177	Glam Metal 2
RTHM028	JAZZ 2	RTHM078	LATIN 4	RTHM128	R&B 2	RTHM178	Glam Metal 3
RTHM029	JAZZ 3	RTHM079	LATIN 5	RTHM129	R&B 3	RTHM179	Punk Rock 1
RTHM030	JAZZ 4	RTHM080	LATIN 6	RTHM130	R&B 4	RTHM180	Punk Rock 2
RTHM031	JAZZ 5	RTHM081	TANGO 1	RTHM131	R&B 5	RTHM181	Punk Rock 3
RTHM032	JAZZ BALLAD	RTHM082	TANGO 2	RTHM132	R&B 6	RTHM182	Punk Rock 4
RTHM033	JAZZ WALTZ	RTHM083	RUMBA 1	RTHM133	16 BEAT 1	RTHM183	Punk Rock 5
RTHM034	JAZZ BAND 1	RTHM084	RUMBA2	RTHM134	16 BEAT 2	RTHM184	JIVE ROCK
RTHM035	JAZZ BAND 2	RTHM085	RUMBA3	RTHM135	16 BEAT 3	RTHM185	ROCK SHUFFLE
RTHM036	JAZZ BAND 3	RTHM086	CHACHA1	RTHM136	16 BEAT 4	RTHM186	ROCK'N'ROLL 1
RTHM037	SWING JAZZ	RTHM087	CHACHA2	RTHM137	16 BEAT 5	RTHM187	ROCK'N'ROLL 2
RTHM038	COOL JAZZ	RTHM088	CHACHA3	RTHM138	16 BEAT 6	RTHM188	BEGUINE1
RTHM039	DIXIELAND 1	RTHM089	CHACHA4	RTHM139	16 BEAT 7	RTHM189	BEGUINE2
RTHM040	DIXIELAND 2	RTHM090	CHACHA5	RTHM140	16 BEAT 8	RTHM190	CARIBBEAN
RTHM041	FUSION	RTHM091	CHACHA6	RTHM141	POP1	RTHM191	BOLERO
RTHM042	LANGE	RTHM092	BOSSANOVA1	RTHM142	POP2	RTHM192	DANGDUT
RTHM043	SOUL1	RTHM093	BOSSANOVA2	RTHM143	POP3	RTHM193	CHINA
RTHM044	SOUL 2	RTHM094	BOSSANOVA3	RTHM144	POP 4	RTHM194	JIANGNAN
RTHM045	SOUL 3	RTHM095	SAMBA 1	RTHM145	POP 5	RTHM195	XIZANG
RTHM046	FOX TROT 1	RTHM096	SAMBA2	RTHM146	POP 6	RTHM196	YUNNAN
RTHM047	FOX TROT 2	RTHM097	SAMBA3	RTHM147	POP 7	RTHM197	HAWAII
RTHM048	FOX TROT 3	RTHM098	MAMBO 1	RTHM148	POP 8	RTHM198	GUARACHA
RTHM049	FOX TROT 4	RTHM099	MAMBO 2	RTHM149	VINTAGE 1	RTHM199	CHARLESTON


	Blowpipe 2	VOI216	San Xian	
VOI174	Piccolo 2	VOI217	Gu Zheng	
VOI175	Flute 2	VOI218	Gu Qin	
VOI176	Pan Flute 2		Ethnic Wind Instrument	
VOI177	Shakuhachi 2	VOI219	Shen	
	Lead 2	VOI220	Na Zi	
VOI178	Square 2	VOI221	Bi Li	
VOI179	Sine Wave	VOI222	Guan Zi	
VOI180	Vox Lead	VOI223	Ba Wu	
	FX 2	VOI224	Di Zi	
VOI181	Space Voice	VOI225	Hu Lu Si	
VOI182	Syn Mallet	VOI226	Pai Xiao	
VOI183	Echo Bell	VOI227	South Xiao	
VOI184	Echo Pan	VOI228	Xiao	
	Ethnic 2	VOI229	Kou Di	
VOI185	Sitar 2	VOI230	Xun	
	Percussion 2		National Bow Stringed Instrument	
VOI186	Castanets	VOI231	Gao Hu	
VOI187	Concert BD	VOI232	Er Hu	
VOI188	808 Tom	VOI233	Zhong Hu	
VOI189	Electric Percussion	VOI234	Ma Tou Qin	
	Sound Effect 2	VOI235	Ban Hu	
VOI190	Gt.CutNoise	VOI236	Jing Hu	
VOI191	String Slap	VOI237	Hu Ensemble	
VOI192	FLKeyClick			
VOI193	Thunder			
VOI194	Wind			
VOI195	Stream			
VOI196	Bubble			
VOI197	Dog			
VOI198	Creaking			
VOI199	Door			
VOI200	Burst Noise			
VOI201	Laughing			
VOI202	Screaming			
VOI203	Heart Beat			
VOI204	Footsteps			
VOI205	Explosion			
	Percussion Instrument			
VOI206	Luo			
VOI207	Pai Gu			
VOI208	Qin			
VOI209	Bian Zhong			
VOI210	Yang Qin			
	Ethnic Stringed Instrument			
VOI211	Liu Qin			
VOI212	Pi Pa			
VOI213	Zhong Ruan			
VOI214	Da Ruan			
VOI215	Yue Qin			

17.Memory

There are three sets of storage/calls on this machine. Users canFast storage of timbre, rhythm and keyboard strength, which can be called with one click later.Omit tedious steps;


1. Preset the required timbre / rhythm / strength / transpose / reverb / chorus, etc., throughLong press the "function" key + keyboard "F5" key combination to save;
2. Called by long pressing the "function" key + keyboard "#F5" key combinationIt is the previously set parameters;

 ▲After the rhythm is stored, you need to press and hold the "Function" key + keyboard "D3" after calling. Only when the key starts the rhythm can it be achieved.




18.Transpose

 There are 12 transfers in this machine; Transpose by long pressing the "Function" key + keyboard "C6-B6" key combination.




19.Reverb

 There are three kinds of reverberation effects in this machine;Select the appropriate one by long pressing the "Function" key + keyboard "#C7-E7" key combination.The reverberation effect.



20.Chorus

 
There are three kinds of chorus effects in this machine; Select the appropriate one by long pressing the "Function" key + keyboard "#F7-A7" key combination. The chorus effect.



21.Record/Play

1. By short pressing the "RECORDER" key of the function panel, the recording begins.The nome can be turned on/off as needed;
2. Stop recording by short pressing the "RECORDER" key of the function panel;
3. Play the recording by short pressing the "REC.PLAY" key in the function panel.

 Keyboard Location Map

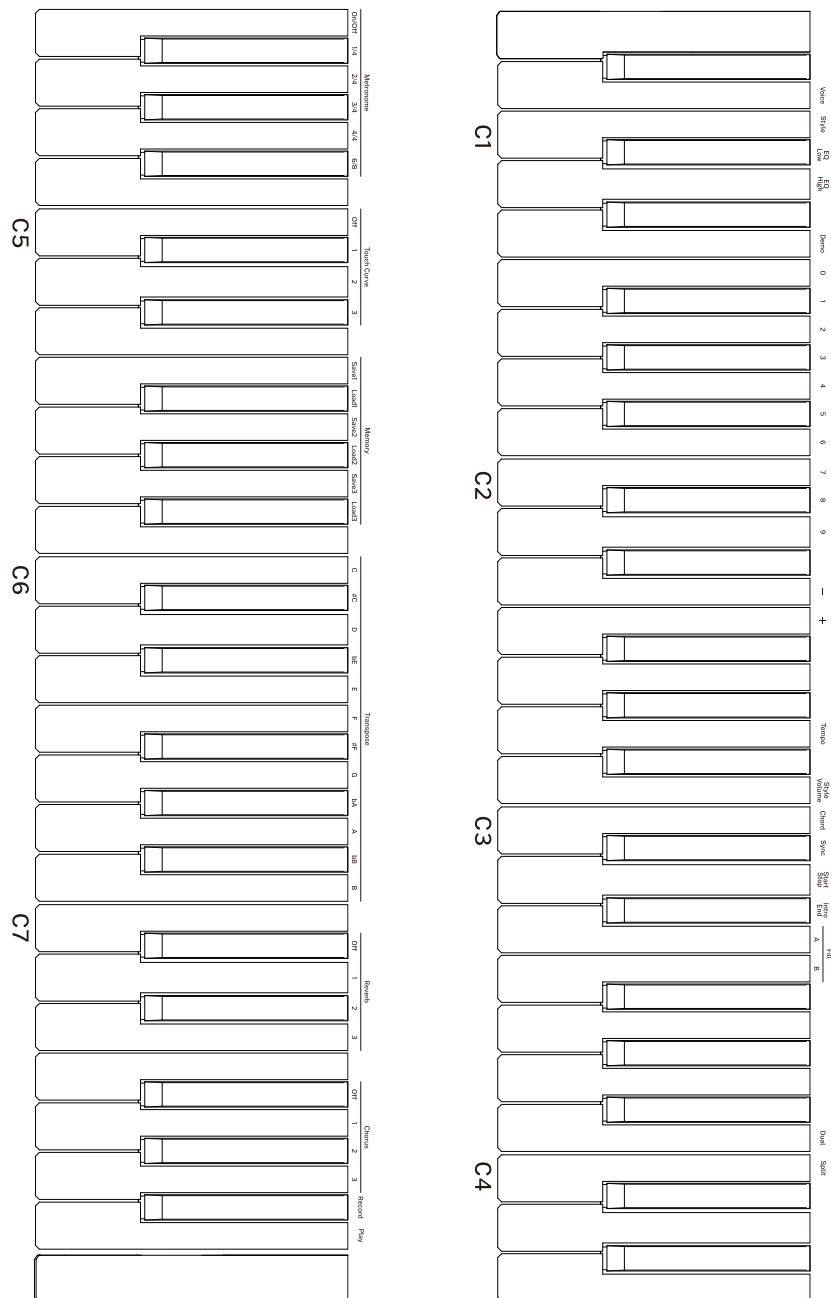

Tone List

	PIANO	VOI044	Tremolo Strings		SYNTH PAD	VOI132	60's E.Piano
VOI000	Acoustic Grand Piano	VOI045	Pizzicato Strings	VOI088	Pad 1 (new age)	VOI133	Harpsichord 2
VOI001	Bright Acoustic Piano	VOI046	Orchestral Harp	VOI089	Pad 2 (warm)	VOI134	Clavichord 2
VOI002	Electric Grand Piano	VOI047	Timpani	VOI090	Pad 3 (polysynth)		Organ 2
VOI003	Honky-tonk Piano		STRING ENSEMBLE	VOI091	Pad 4 (choir)	VOI135	Celesta 2
VOI004	Rhodes Piano	VOI048	String Ensemble 1	VOI092	Pad 5 (bowed)	VOI136	Glockenspiel 2
VOI005	Chorused Piano	VOI049	String Ensemble 2	VOI093	Pad 6 (metallic)	VOI137	Music Box 2
VOI006	Harpsichord	VOI050	Synth Strings 1	VOI094	Pad 7 (halo)	VOI138	Vibraphone 2
VOI007	Clavichord	VOI051	Synth Strings 2	VOI095	Pad 8 (sweep)	VOI139	Marimba 2
	CHROMATIC PERCUSSION	VOI052	Choir Aahs		SYNTH EFFECTS	VOI140	Marimba 2
VOI008	Celesta	VOI053	Voice Oohs	VOI096	FX 1 (rain)	VOI141	Xylophone 2
VOI009	Glockenspiel	VOI054	Synth Voice	VOI097	FX 2 (soundtrack)	VOI142	Tubular-bell 2
VOI010	Music Box	VOI055	Orchestra Hit	VOI098	FX 3 (crystal)	VOI143	Detuned Organ
VOI011	Vibraphone		BRASS	VOI099	FX 4 (atmosphere)	VOI144	60's Organ
VOI012	Marimba	VOI056	Trumpet	VOI100	FX 5 (brightness)	VOI145	Bandoneon
VOI013	Xylophone	VOI057	Trombone	VOI101	FX 6 (goblins)		Guitar
VOI014	Tubular Bells	VOI058	Tuba	VOI102	FX 7 (echoes)	VOI146	Ukulele
VOI015	Dulcimer	VOI059	Muted Trumpet	VOI103	FX 8 (sci-fi)	VOI147	Mandolin
	ORGAN	VOI060	French Horn		ETHNIC	VOI148	Hawaiian Gt
VOI016	Hammond Organ	VOI061	Brass Section	VOI104	Sitar	VOI149	Chorus Gt
VOI017	Percussive Organ	VOI062	Synth Brass 1	VOI105	Banjo	VOI150	Funk Gt
VOI018	Rock Organ	VOI063	Synth Brass 2	VOI106	Shamisen	VOI151	Feedback Gt
VOI019	Church Organ		REED	VOI107	Koto		Synth
VOI0t	Reed Organ	VOI064	Soprano Sax	VOI108	Kalimba	VOI152	Synth 1
VOI021	Accordion	VOI065	Alto Sax	VOI109	Bagpipe	VOI153	Synth 2
VOI022	Harmonica	VOI066	Tenor Sax	VOI110	Fiddle	VOI154	Synth 3
VOI023	Tango Accordion	VOI067	Baritone Sax	VOI111	Shanai	VOI155	Synth 4
	GUITAR	VOI068	Oboe		PERCUSSIVE	VOI156	Synth 5
VOI024	Acoustic Guitar (nylon)	VOI069	English Horn	VOI112	Tinkle Bell	VOI157	Synth 6
VOI025	Acoustic Guitar (steel)	VOI070	Bassoon	VOI113	Agogo	VOI158	Synth 7
VOI026	Electric Guitar (jazz)	VOI071	Clarinet	VOI114	Steel Drums		Strings 2
VOI027	Electric Guitar (clean)		PIPE	VOI115	Woodblock	VOI159	Violin 2
VOI028	Electric Guitar (muted)	VOI072	Piccolo	VOI116	Taiko Drum	VOI160	Cello 2
VOI029	Overdriven Guitar	VOI073	Flute	VOI117	Melodic Tom	VOI161	Harp 2
VOI030	Distortion Guitar	VOI074	Recorder	VOI118	Synth Drum	VOI162	Strings
VOI031	Guitar Harmonics	VOI075	Pan Flute	VOI119	Reverse Cymbal		Ensemble 2
	BASS	VOI076	Bottle Blow		SOUND EFFECTS	VOI163	Choir Aahs2
VOI032	Acoustic Bass	VOI077	Shakuhachi	VOI120	Guitar Fret Noise	VOI164	Voice doo 2
VOI033	Electric Bass(finger)	VOI078	Whistle	VOI121	Breath Noise		Brass 2
VOI034	Electric Bass (pick)	VOI079	Ocarina	VOI122	Seashore	VOI165	Trumpet 2
VOI035	Fretless Bass		SYNTH LEAD	VOI123	Bird Tweet	VOI166	Trombone 2
VOI036	Slap Bass 1	VOI080	Lead 1 (square)	VOI124	Telephone Ring	VOI167	Mute Trumpet 2
VOI037	Slap Bass 2	VOI081	Lead 2 (sawtooth)	VOI125	Helicopter	VOI168	French Horn 2
VOI038	Synth Bass 1	VOI082	Lead 3 (caliope lead)	VOI126	Applause	VOI169	Brass 2
VOI039	Synth Bass 2	VOI083	Lead 4 (chiff lead)	VOI127	Gunshot		Reed 2
	SOLO STRINGS	VOI084	Lead 5 (charang)		PIANO 2	VOI170	Soprano Sax 2
VOI040	Violin	VOI085	Lead 6 (voice)	VOI128	Piano w	VOI171	Oboe 2
VOI041	Viola	VOI086	Lead 7 (fifths)	VOI129	Piano d	VOI172	English Horn
VOI042	Cello	VOI087	Lead 8 (bass & lead)	VOI130	Honky Tonk W	VOI173	Clarinet 2
VOI043	Contrabass			VOI131	Detuned EP		