 
 


DIGITAL PIANO

User Manual

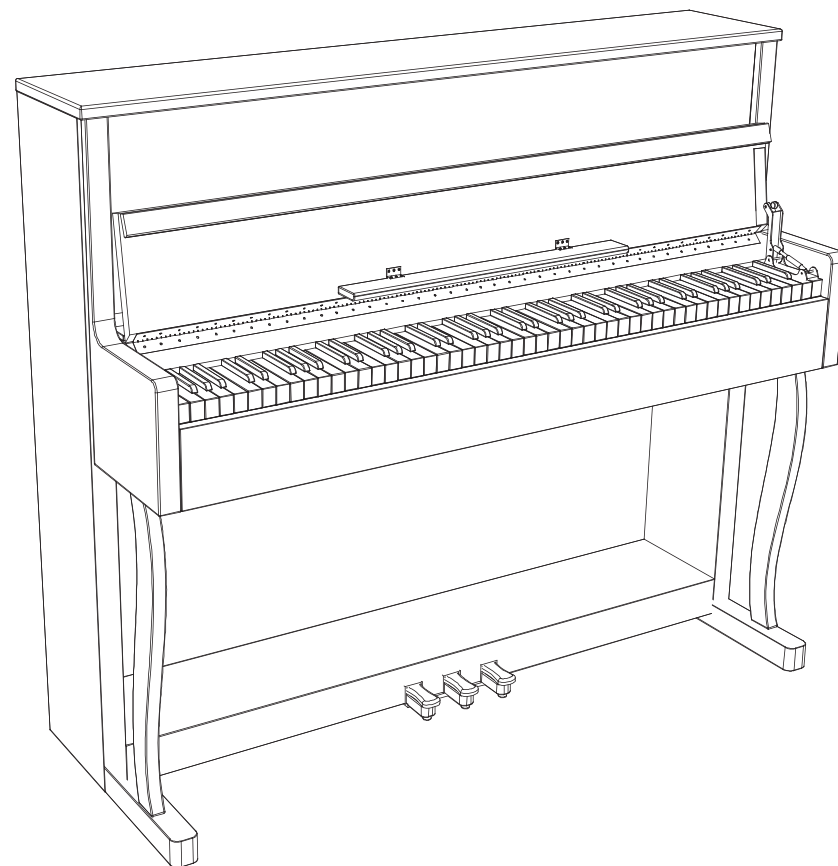

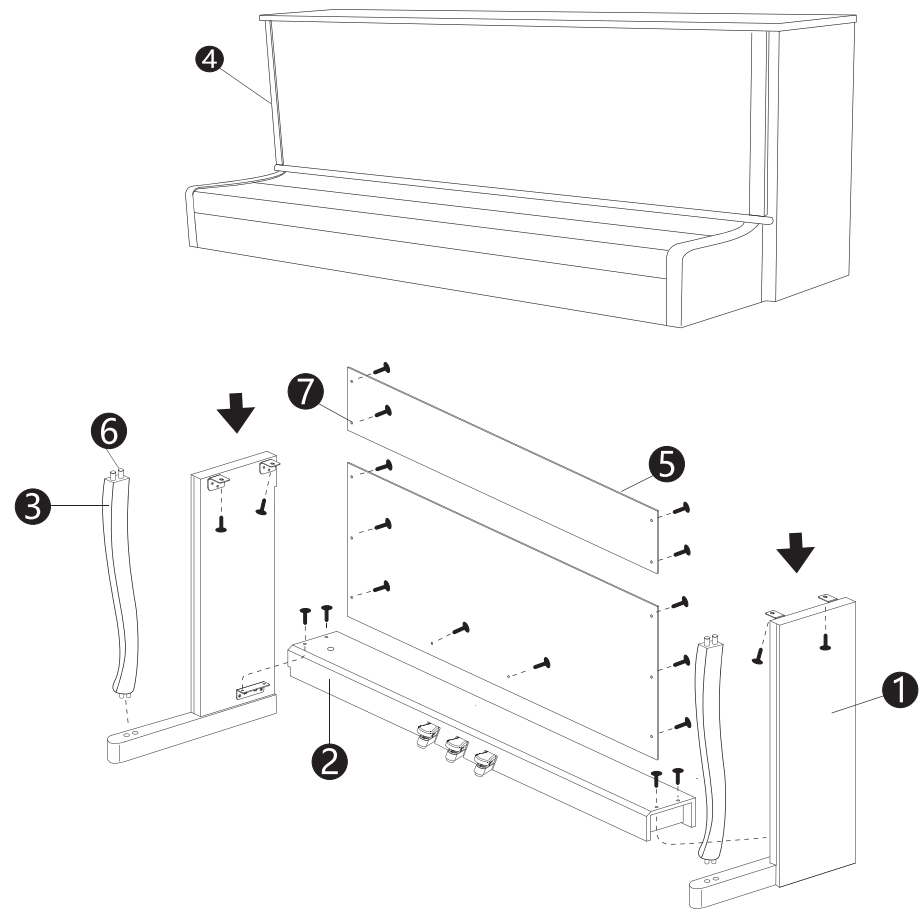

- ① Left / Right Side Support Panel
- ② Pedal Crossbeam
- ③ Left / Right Support Pillar
- ④ Piano Body
- ⑤ Rear Fixing Plate
- ⑥ Wooden Dowel Pin
- ⑦ Screws

Product Description

Precautions for Plug-in Version

- 1. This product is equipped with an original 9-12V charger.
Do NOT use any charger exceeding 9-12V. Otherwise, the product may be burnt out or even cause fire.
- 2. Unplug the charger when the product will not be used for a long time.

Accessory List

ITEM Name	Qty
Adapter	1 PCS
Piano Main Body	1 PCS
Pedal Cross-beam	1 PCS
Left / Right Support Plate	2 PCS
Left / Right Support Column	2 PCS
Rear Fixing Plate	2 PCS
Wooden Dowel	6/8 PCS
Screw	20 PCS
Instruction Manual	1 PCS

1.Power On / Off

The instrument is powered-off by default. Press and hold for 3 seconds to Power On , the display screen lights up. To Power Off , also press and hold within 3 seconds.

2. Volume

Turn left for lower volume 【-】 ; Turn right for higher volume 【+】 . The mid-volume level is recommended for use.

3. Tone

Hold down the 【Tone】 key, then use the keyboard function keys 【Select-】 or 【Select+】 to switch. (85 tones available)

4. Rhythm

Hold down the 【Rhythm】 key, then use the keyboard function keys 【Select-】 or 【Select+】 to switch. Then hold down the 【Function】 key plus keyboard 【Start】 , or hold down the 【Function】 key plus keyboard 【Sync】 to enable rhythm. (85 rhythms available)

5. Demo Songs

Hold down the 【Demo Song】 key, then use the keyboard function keys 【Select-】 or 【Select+】 to switch. (85 demo songs available) After selection, press the 【Demo Song】 key again to turn it on or off.

6. Record / Playback

Hold down the 【Record】 key; the indicator light turns on and the metronome sounds, indicating recording mode is active. Press once more to 【Stop Recording】 .Press once again to 【Playback】 the recording.

7. Dual Tone

Hold down the 【Function】 key plus keyboard 【Dual Tone On】 to turn it on;
Hold down the 【Function】 key plus keyboard 【Dual Tone Off】 to turn it off.

8. Split Keyboard (Splits the 88-key keyboard into two halves for two-player performance.)

Hold down the 【Function】 key plus keyboard 【Split Keyboard On】 to turn it on;
Hold down the 【Function】 key plus keyboard 【Split Keyboard Off】 to turn it off.

9. Sync

- 1. Select the desired accompaniment. Hold down the 【Function】 key plus the keyboard 【Sync】 key for one-touch playback of the preset rhythm.
- 2. In Chord mode, press the Sync key combination to enter Sync-Start standby mode. Play a chord, and the accompaniment will start automatically.
- 3. To cancel Sync, press the 【Start / Stop】 key combination.

10. Metronome

Select the desired time signature. Hold down the 【Function】 key plus keyboard 【Metronome 1】 , 【Metronome 2】 , 【Metronome 3】 , 【Metronome 4】 , 【Metronome 5】 to turn on the metronome. Hold down the 【Function】 key plus keyboard 【Metronome Off】 to turn off the metronome.

11. Transpose

Hold down the 【Function】 key plus keyboard 【Transpose+】 for transpose adjustment; hold down the 【Function】 key plus keyboard 【Transpose-】 for transpose adjustment. There are 12 transpose levels in total. To restore to C key, hold down the 【Function】 key plus keyboard 【Transpose 0】 .

12. Tempo

Hold down the 【Function】 key plus keyboard 【Tempo-】 or keyboard 【Tempo+】 to adjust the tempo of 【Metronome】 , 【Rhythm】 and 【Demo Songs】 .

13. Reverb

Hold down the 【Function】 key plus keyboard 【Reverb On】 or keyboard 【Reverb Off】 .

14. Brightness

Hold down the 【Function】 key plus keyboard 【Brightness Default】 ;
Hold down the 【Function】 key plus keyboard 【Brightness-】 . The more you decrease, the warmer and richer the sound becomes;
Hold down the 【Function】 key plus keyboard 【Brightness+】 . The more you increase, the brighter and crisper the sound becomes.

15. Low-Band EQ

Hold down the 【Function】 key plus keyboard 【Low-Band EQ Default】 ; (Restore default value)
Hold down the 【Function】 key plus keyboard 【Low-Band EQ-】 . The more you decrease, the brighter the low-frequency sound becomes;
Hold down the 【Function】 key plus keyboard 【Low-Band EQ+】 . The more you increase, the richer and fuller the low-frequency sound becomes.

16. High-Band EQ

Hold down the 【Function】 key plus keyboard 【High-Band EQ Default】 ; (Restore default value)
Hold down the 【Function】 key plus keyboard 【High-Band EQ-】 . The more you decrease, the richer and warmer the high-frequency sound becomes;
Hold down the 【Function】 key plus keyboard 【High-Band EQ+】 . The more you increase, the brighter the high-frequency sound becomes.

17. Soundboard Resonance

Default: Soundboard Resonance is off.

There are 2 Soundboard Resonance effects. Hold down the **【Function】** key plus keyboard **【Soundboard Resonance 1】** ; hold down the **【Function】** key plus keyboard **【Soundboard Resonance 2】** .

To turn it off: Hold down the **【Function】** key plus keyboard **【Soundboard Resonance Off】** .

18. Start / Stop

Select the rhythm to be synced, then hold down the **【Function】** key plus keyboard **【Start】** .

19. Chord On/Off

Hold down the **【Function】** key plus keyboard **【Chord On/Off】** .

Then hold down the **【Function】** key plus keyboard **【Start】** or hold down the **【Function】** key plus keyboard **【Sync】** to enable chord accompaniment.

20. Accompaniment Volume

Hold down the **【Function】** key plus keyboard **【Accompaniment Volume-】** to decrease the accompaniment volume;

Hold down the **【Function】** key plus keyboard **【Accompaniment Volume+】** to increase the accompaniment volume.

21. Touch Sensitivity

3 touch-response levels are available: Hold down the **【Function】** key plus keyboard **【Standard Touch】** , hold down the **【Function】** key plus keyboard **【Light Touch】** , hold down the **【Function】** key plus keyboard **【Heavy Touch】** .

PIANO	
001	GRAND PIANO 1
002	BRIGHT PIANO 1
003	PIANO ELEC
004	HONKY-TONK
005	E PIANO1
006	E PIANO2
007	GRAND HARPSICHORD
008	CLAVI CHORD 1
GLOCK	
009	CELESTA
010	GLOCKENSPIEL 1
011	MUSIC BOX 1
012	VIBRAPHONE 1
013	MARIMBA 1
014	XYLOPHONE 1
015	TUBULR BELLS 1
016	DULCIMER 1
ORGAN	
017	HAND ORGAN 1
018	PERCHY ORGAN 1
019	ROCK ORGAN
020	CHURCH ORGAN 1
021	REED ORGAN 1
022	ACCORDN 1
023	HARMONICA 1
024	TANGO ACCORDN 1
GUITAR	
025	GUITAR NYLON 1
026	GUITAR STEEL 1
027	GUITAR JAZZ 1
028	GUITAR CLEAN 1
029	GUITAR MUTED 1
030	GUITAR OVRDRV
031	GUITAR DISTRT 1
032	GUITAR HRMNX
BASS	
033	ACOUSTIC BASS 1
034	FINGER BASS 1
035	ELECT BASS 1
036	FRETLS BASS
037	SLAP BASS 1
038	SLAP BASS 2
039	SYN BASS 1
040	SYN BASS 2
STRING	
041	VIOLIN 1
042	VIOLA 1
043	CELLO 1
044	CONTRABASS 1
045	STR TREM 1
046	STR PIZZ
047	HARP 1
048	TIMPANI 1

CONCERT	
049	STRINGS 1
050	STRINGS 2
051	STR SYN 1
052	STR SYN 2
053	CHOIR AAHS 1
054	VOICE OOHs 1
055	VOICE SYN
056	ORCH HIT 1
BRASS	
057	TRUMPT 1
058	TROMBONE 1
059	TUBA 1
060	MUTE TPT 1
061	FR HORN 1
062	BRASS SECT 1
063	BRASS SYN 1
064	BRASS SYN 2
PIPE	
065	SAX SOPRANO
066	SAX ALTO 1
067	SAX TENOR 1
068	SAX BTONE 1
069	OBOE 1
070	ENG HORN 1
071	BASSON 1
072	CLARINET 1
WOODPIPE	
073	PICCOLO 1
074	FLUTE 1
075	RECORDER 1
076	PAN FLUTE
077	BOTTLE BLOWN
078	SHAKHACHI
079	WHISTLE 1
080	OCARINA
SYNTH PIPE	
081	SQR WAVE
082	SAW TOOTH
083	CALLIOPE
084	CHIFF
085	CHARANG

Rhythm List (85 Rhythms)


8 BEAT	001	8 Beat 1	RHYTHM&BLUES	048	Chicago Blues
	002	8 Beat 2		049	Fast Gospel
	003	8 Beat 3		050	Groove Soul
	004	8 Beat 4		051	Rap
	005	8 Beat Heat		052	GospelSl
	006	8 Beat Pop 1		053	Blues
	007	8 Beat Pop 2		054	Slow Blues
BALLAD	008	Ballad 1	Disco	055	Foxtrot
	009	Ballad 2		056	Disco Tropic
	010	Guitar Ballad		057	Disco Hands
	011	Organ Ballad		058	Two Step
	012	Bluse Ballad		059	Polk Pop
	013	Epic Ballad		060	Waltz 1
	014	Rock Ballad		061	Waltz Pop 1
	015	Slow Ballad	WORLD MUSIC	062	Waltz Pop 2
	016	Pop Ballad		063	Rai
	017	Electro Pop Ballad		064	Twist 1
	018	Polk Ballad		065	Twist 2
16 BEAT	019	16 Beat 1		066	Miami Pop
	020	16 Beat 2		067	Motown
	021	16 Beat 3		068	Reggae
	022	16 Beat 4		069	Swing Reggae
	023	16 Beat Funk		070	Mambo
	024	16 Beat Pop		071	Beguine
	025	16 Beat Ballad	DANCE	072	Musette
LATIN	026	Bossa Nova 1		073	House
	027	Guitar Bossa		074	Slow Fox
	028	Pop Bossa		075	Vienna Waltz
	029	Tango		076	Salsa
	030	Cha Cha		077	Disco
	031	Rhumba		078	Hip Hop Pop
	032	TEX TEX		079	Analog Pop
COUNTRY	033	Country	JAZZ&SWING	080	Club Dance
	034	Country Rock		081	Boogie
	035	Country Shuffle		082	Funky Pop
	036	Country Swing		083	Jazz Rock
	037	Country Ballad		084	Swing 1
	038	Country Waltz		085	Dixieland
ROCK R&B	039	50' s Rock		086	Jazz Samba
	040	Heavy Metal			
	041	Rock 1			
	042	Rock 2			
	043	Soft Rock			
	044	Slow Rock			
	045	Hard Rock			
	046	Rock & Roll 1			
	047	Rock & Roll 2			

Demo Song List (85 Songs)

001	MinutWlz
002	DJ Dance
003	Fountian
004	SpanGirl
005	SonataPn
006	SuperSng
007	LittlBee
008	HorseRac
009	Nocturne
010	TheSpain
011	BusyTran
012	Mexico
013	MozartPn
014	Minuet
015	Nifuma
016	Disco
017	FolkSong
018	Girl Sea
019	LittStar
020	KindeGtn
021	Wahaha
022	Duck&Cik
023	Humorous
024	Joy Song
025	GoingHom
026	Dove
027	Auldlang
028	Moonligh
029	HapyBirh
030	PraiseSng
031	Dolly
032	Market
033	Family
034	A cradle
035	At Home
036	Seasons
037	YearsAgo
038	Pigeons
039	InnerVic
040	Violin
041	Swan
042	Musettes
043	GypsyRnd
044	Serenade
045	Polka
046	SoilPull
047	Trout

048	Send-off
049	March
050	ForElise
051	SwaniRiv
052	France
053	Danube
054	Hungary
055	Spaceman
056	Patriot
057	Cuckoo
058	SingKite
059	TongChil
060	DoReMi
061	We Happy
062	LittlBee
063	Russia
064	Plaster
065	Foison
066	JingleBe
067	PaperBoy
068	Swallow
069	New Year
070	Edelweis
071	MoonRivr
072	Beyer 10
073	Beyer 20
074	Beyer 30
075	Beyer 40
076	Beyer 50
077	Beyer 60
078	Beyer 70
079	Beyer 71
080	Beyer 72
081	Beyer 75
082	Beyer 76
083	Beyer 77
084	Beyer 78
085	Beyer 79

 Jack Panel

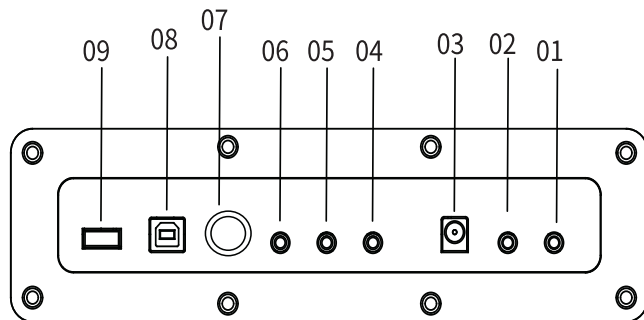

1. Headphone Jack: Connecting headphones will automatically mute the built-in speaker output, so you can play without disturbing others.
2. Audio Output: This interface can be connected to audio equipment.
3. Operating Voltage: Input voltage range DC 9-12V.
4. Microphone: Use the manufacturer-specified professional microphone.
5. Audio Input: Plug an audio cable into the Audio Input jack to connect your mobile phone for song playback.
6. Sustain Pedal: This unit supports sustain pedal function. Press the pedal as required during use.
7. Triple Pedal: Supports triple-pedal functions identical to those of a grand piano, to meet your performance needs for various scenarios.
8. MIDI Interface: Connect to a computer, mobile phone or iPad via data cable.
Launch the corresponding software to transmit and receive MIDI signals.
9. USB Port: Play MP3 songs from a USB flash drive.

 
Bluetooth Function:

Under Bluetooth mode, connect Bluetooth-enabled devices to use the unit as a Bluetooth speaker. (Bluetooth Name: BT Audio)

Special reminder: This product is an electronic product. After electrified, the loudspeaker (two horns or one horn, earphone) has some current sound as a normal phenomenon. It is necessary to keep away from these devices, such as radio, routers, TV receivers, refrigerators, washing machines, etc.

Power Supply

This product can be supplied by standard indoor wall socket, please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply, if you do not use it for a long time, please pull out the power cord and keep it properly.



Sign

In order to ensure that you are safe and correct use of this product, to prevent damage to the user and other people, and to the financial damage, the specification and the product marked with a series of safety signs. All kinds of signs and their meaning.

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a potential risk of death or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example

- This triangle mark indicates that the user should pay attention to the matters. (left case is be careful electric shock)
- The circular sign painting a slash said prohibited matters. The icon in the logo or next to the specific content of the ban. (left case is no disassemble)
- Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (left case is the power plug must be pulled out of the socket)

Warning

Smoke, odor, overheating

When the product is smoking, emitting odors or overheating, it continues to be used to cause fire and electric shock. In the event of such a situation, the following operations shall be carried out immediately.

- 1 Turn off the power supply.
- 2 Pull the plug from the power outlet.
- 3 Contact your agency

Power cord

● Improper use of power supply leads to danger of fire and electric shock. Must observe the following precautions.

- Special power lines specified for this product must be used.
- An AC power source with output voltage within the household rated voltage must be used.
- It is not allowed to overload the power socket and the power extension line.
- Improper handling of power lines, resulting in damage or rupture of the fire and the risk of electric shock. Must observe the following precautions.
- Do not place heavy objects on the power line or make them heated.
- Do not attempt to transform the power cord or bend it too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace the power cord of the same type.
- Do not use wet hands to touch the power cord and plug, otherwise there is a risk of electric shock.

● Please use the power cord in the place where the water will not be spilled. Water has the risk of fire and electric shock.

● Never put a vase or any other container with water in this product. Water has the risk of fire and electric shock.

● Do not let the minor contact plug and power line or a connecting plate. Minor knowledge of useless electricity safety causes danger of electric shock.

● Improper use of power supply leads to danger of fire and electric shock. The following matters of attention must be observed.

- Do not place the power cord near the furnace or other heat sources.
- Unplug the power cord from the power outlet. Must grasp the plug body.
- Plug the power cord into the power socket.
- Before connecting or cutting off the power cord, make sure that the power is off.
- The power cord should be removed from the electrical outlet of the wall before a thunderstorm occurs or traveling or before other long leave.
- At least once a year, unplug the power cord from the wall outlet and clean the dust around the plug.

Don't burn this product
Do not put this product into the fire, otherwise it will cause the burning of wood products and the explosion of the internal electronic components. There is a danger of fire and personnel injury

Water and foreign matter
Water and other liquids and (metal) into this product has the risk of causing fire and electric shock. The following operation should be performed immediately when the above situation occurs.

- 1 turn off the power supply
- 2 if the power cord is used for power supply, it will be pulled off from the wall of the power outlet
- 3 contact your dealer.

Dismantling and rebuilding
Do not disassemble this product or transform it in any way. Otherwise it will be hazardous to electrical shock, burns or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your dealer.

Service Record

Date	Service	Service Technician	Date	Service	Service Technician